



Clockwise rotation Limit swith setting

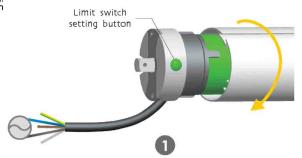


Power

When the black wire and blue wire connect with power, the drive adapter will rotate in a clockwise direction

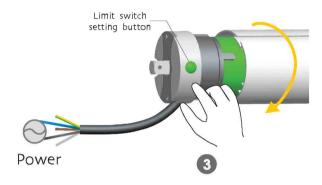

Release the setting button in the limit head

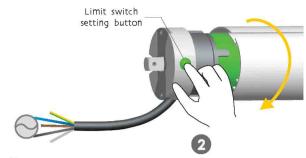


When the drive adapter rotate in a clockwise direction or stop(the black wire and blue wire connect with power), press the setting button in the limit head, the motors will rotate in a clockwise direction



Repeat step 2 and step 3 namely can accurate setting clockwise limit position


namely confirm clockwise limit position

Counter-clockwise rotation Limit swith setting

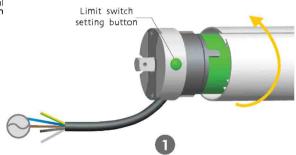


Power

When the brown wire and blue wire connect with power, the drive adapter will rotate in a reverse direction

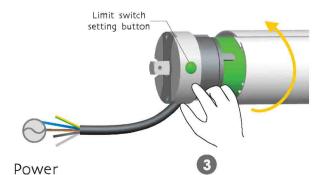

Release the setting button in the limit head namely confirm reverse limit position

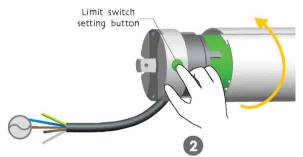

Power

When the drive adapter rotate in a reverse direction or stop(the brown wire and blue wire connect with power), press the setting button in the limit head, the motors will rotate in a reverse direction



Repeat step 2 and step 3 namely can accurate setting reverse limit position





B: Button Electronic

Electronic Limit + Resistance and stop function



B/BK-type motors Tubular Motor

Specification

Version No.: A/O5

